



**STEP 1**

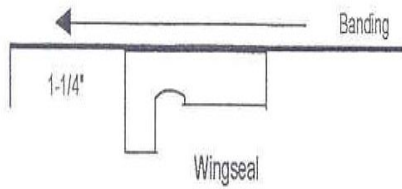

Cut your banding to the proper length. With the tips of the wingseal pointed down, thread the banding through the wingseal, extending the end about 1-1/4" inches past the seal.

**STEP 2**

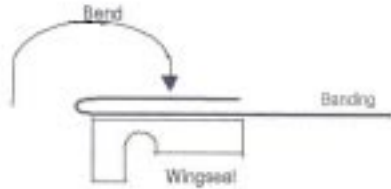


Bend the end of the banding up 180 degrees over the wingseal so that it is flat.

**STEP 3**




Bend the seal back on the banding about 30 degrees.  
 Your Fabstrap is complete.

**STEP 4**

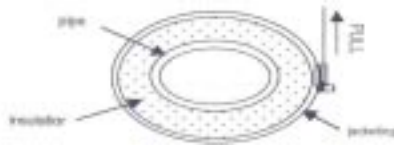

Wrap the fabstrap around the jacketed insulation, with the wingseal tips pointing up. Thread the banding through the wingseal. Pull the banding tight with a banding tool.

**STEP 5**

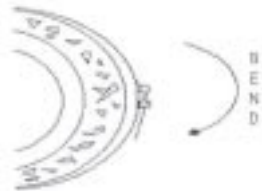

After the banding is pulled tight, bend the banding at the wingseal, up and over 180 degrees.

**STEP 6**

Push the tips of the wingseal down, then lightly hit them with a hammer, to lock the fabstrap into place. Trim the excess banding or bend over the top.

